

Changing the one-touch & constant-touch Memory key way

◆ Changing the one-touch & constant-touch Memory key way

Press the DOWN button on the Handset until the base reaches its lowest position. Press and hold the DOWN button again until the LED display reads "RST".

Press and hold the 1 button (about 5 seconds) while the LED flashes "RST" and then switches to either:

10.1 =One-Touch

10.2 = Constant-Touch

Release "1" button. Press and hold "1" button again until the desired setting is reached. Once the chosen setting is displayed, release the button and wait about 5 seconds for the display to return to "RST".

Finish the **reset** process by pressing and holding the DOWN button until the desk lowers a little bit more, slightly rises and stops. Release the button. The new setting is saved and your desk is now ready to use.