

◆ Resetting the base;

When the LED display shows an error code, press the DOWN button for up to 5 seconds until the LED changes to a flashing "RST".

Then press the DOWN button again until the base lowered a little more and slightly risen, At this time, LED will show Normal number 637, the base is now ready for use.