

## Setting the memory preset buttons

### ◆ Setting the memory preset buttons ;

Pressing UP/DOWN button to the desired height, then press “M” button , the display will change to “S hyphen”.

Then select and press one of the memory buttons”1”, “2”, “3” or “4”. The position has been saved.

Using the UP/DOWN buttons, move the base to the next desired position and repeat the process to set another desired height.